



KAKO DODATI ČLANOVE U APLIKACIJU

- Kliknite na "Me", zatim na "Home Management" (Slika 13).
- Odaberite dom koji je već dodan s uređajem. Ako dom nije kreiran, najprije ga kreirajte.
- Kliknite na "Add Member" (Slika 14).
- Odaberite način pozivanja, poput WeChat, Whatsapp, Instagram.
- Pozvana osoba otvara aplikaciju "Smart Life", odabire "Home Management", zatim klikne "Join a home" (Slika 15) i unosi pozivni kod (Slika 16) koji je poslao pozivatelj.

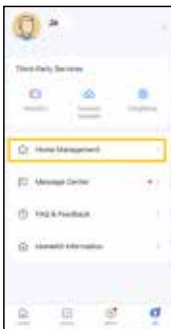

Slika 13

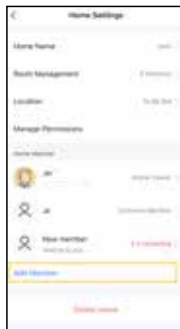

Slika 14



Slika 15



Slika 16



Slika 17

PODSJETNIK ZA NEZATVORENA VRATA

- Ako su vrata otvorena i ostanu otvorena dulje od jedne minute, sef će poslati poruku aplikaciji putem WiFi-ja, a aplikacija će prikazati obavijest (Slika 17).

UPIT O WIFI INFORMACIJAMA

- Otvorite aplikaciju, kliknite na "Zapisnik", možete provjeriti zapise otključavanja.
- Kliknite na "Poruka alarma" za provjeru alarma pogrešne lozinke i alarma za nezatvorena vrata.




SEF S OTVARANJEM PREKO APLIKACIJE S UDALJENE LOKACIJE ILI NA OTISAK PRSTA


SW-24W F24 WIFI

! Molimo vas da ne držite rezervne ključeve u sefu!

Schema kućišta

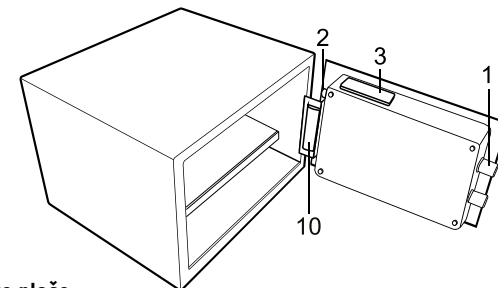

Schema upravljačke ploče

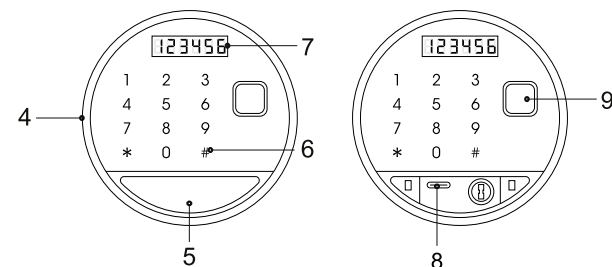

- | | |
|-------------------------|----------------------------|
| 1. Vijci | 6. Gumb za potvrdu |
| 2. Gumb za postavljanje | 7. LED zaslon |
| 3. Pretinac za baterije | 8. Priključak za napajanje |
| 4. Ploča | 9. Senzor otiska prsta |
| 5. Poklopac hitne brave | 10. LED svjetlo |


FUNKCIJE

- Postavljanje šifre: Kratko pritisnite gumb za postavljanje (pritisnite oko 1 sekundu, ne dulje od 2 sekunde).
- Povratak na tvorničke postavke: Držite gumb za postavljanje dulje od 2 sekunde.
- Brisanje: Prilikom unosa nove lozinke, pritiskom na tipku "*" briše se zadnja unesena znamenka.
- Ukupno ima pet korisničkih šifri, tvornički zadana šifra je "1234". Ova se šifra može mijenjati samo putem gumba za postavljanje, a ostale 4 šifre mogu se dodavati i mijenjati putem aplikacije.
- Postoji jedna glavna šifra, tvornički zadana je "19980818", može se mijenjati samo putem gumba za postavljanje.
- Kada sef uđe u stanje mirovanja, sve prethodne radnje se prekidaju, pritisnite bilo koju tipku za buđenje, a pozadinsko osvjetljenje tipke će se upaliti.

OTVARANJE SEFA PRVI PUT

- Pritisnite jedan kraj poklopca kako biste uklonili poklopac hitne brave, vidjet ćete hitnu bravu.
- Umetnite hitni ključ i okrenite ga u smjeru kazaljke na satu na ploči, nakon čega možete otvoriti vrata.

⚠ UPOZORENJE: Radi vaše potpune sigurnosti, pažljivo čuvajte hitne ključeve na tajnom mjestu izvan sefa.

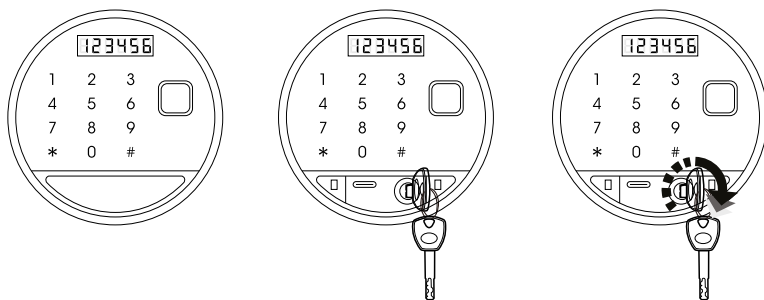

NAPAJANJE

- Otvorite vrata.
- Izvadite pretinac za baterije.
- Umetnite 4 nove baterije tako da ih poravnate prema "+" i "-" oznakama.

PROMJENA KORISNIČKE ŠIFRE

- Kada su vrata otvorena, kratko pritisnite gumb za postavljanje. Na LCD-u se prikazuje "--", pozadinsko osvjetljenje tipke se pali, a zvučni signal se oglasi dva puta. U tom slučaju unesite novu šifru od 3 do 8 znamenki i pritisnite "#" za potvrdu. Nova šifra se prikazuje na ekranu. Ako pritisnete "*" prije unosa šifre, unesena šifra se neće prikazivati, a na ekranu će pisati "-DoNE". Dugi zvuk zvučnog signala označava uspješnu promjenu šifre.
- Ako ne pritisnete tipku unutar 8 sekundi, izlazi se iz načina promjene (šifra ostaje stara) i vraća se u stanje pripravnosti.

PROMJENA GLAVNE ŠIFRE

- Kada su vrata otvorena, pritisnite bilo koju tipku za buđenje, zatim dvaput pritisnite "0", kratko pritisnite gumb za postavljanje. Unesite novu šifru od 3 do 8 znamenki i pritisnite "#" za potvrdu. Ako se na ekranu pojavi "-DoNE-", zvučni signal daje dugi zvuk što označava uspješnu promjenu šifre.
- Ako ne pritisnete tipku unutar 8 sekundi, izlazi se iz načina promjene (šifra ostaje stara) i vraća se u stanje pripravnosti.

REGISTRACIJA OTISKA PRSTA

- Kada su vrata otvorena, pritisnite bilo koju tipku za buđenje, zatim pritisnite "0" i "1", na ekranu će se prikazati "01", pritisnite gumb za postavljanje unutar vrata, zvučni signal će dvaput zazvoniti.
- Stavite prst na senzor otiska prsta gdje je upaljeno plavo svjetlo, svaki put kad stavite prst, uređaj će zazvoniti, a prst treba staviti 5 puta zaredom.
- Nakon uspješne registracije, zeleni indikator modula otiska prsta će zazvoniti. Ako se na ekranu pojavi "-DONE-", otisak prsta je uspješno registriran uz zvučni signal. Ako registracija ne uspije, modul otiska prsta svijetli crveno, čuje se zvučni signal tri puta i prikazuje "-error".

⚠ UPOZORENJE: Može se registrirati najviše 50 otisaka prsta.

OTVARANJE VRATA

Otvaranje šifrom

- Pritisnite bilo koju tipku za buđenje, unesite korisničku ili glavnu šifru i pritisnite "#", zvučni signal daje dugi zvuk, vrata se otvaraju, a na ekranu piše "OPENED". Svjetlo ostaje upaljeno 30 sekundi nakon otvaranja vrata.

Otvaranje otiskom prsta

- U zatvorenom stanju, stavite registrirani prst na modul otiska prsta, čuje se zvučni signal, vrata se otvaraju, a na ekranu piše "OPENED". Svjetlo ostaje upaljeno 30 sekundi nakon otvaranja vrata.
- Ako je šifra ili otisak prsta pogrešan, ogласiti će se zvučni signal tri puta. Na ekranu piše "-Error".
- Ako pet puta zaredom unesete pogrešnu šifru ili otisak prsta, sef će se zaključati na 20 sekundi i zvoniti 20 sekundi. Ako još tri puta zaredom pogriješite, sef se zaključava na 5 minuta i zvoniti 5 minuta.

ZATVARANJE VRATA

- Gurnite vrata malo jače za automatsko zaključavanje ili, kada se ekran probudi, pritisnite "#" za zaključavanje. Ako vrata nisu zatvorena, zvučni signal će tri puta kratko zazvoniti.

INICIJALIZACIJA / BRISANJE SUSTAVA

- Kada su vrata otvorena, pritisnite i držite gumb za postavljanje oko 5 sekundi dok se ne upali pozadinsko osvjetljenje. To znači da su svi zapisi šifri i otisaka prsta izbrisani. Nakon resetiranja, šifra se vraća na izvorno stanje, a svi otisci prsta se brišu.

UPOZORENJE NA PRAZNU BATERIJU

- Kada otvorite vrata, na ekranu piše "OPENED", a zatim "L-BAT", što znači da je baterija pri kraju, zamijenite bateriju na vrijeme.

WIFI - UPUTE ZA RAD

Savjeti:

- Sve WIFI operacije treba izvoditi kada je mreža normalna, nije podržana za 5G mreže.
- Najbolje je povezivanje na mrežu kada je napon baterije iznad 4,8V, inače povezivanje može ne uspjeti.

KAKO PRVI PUT POVEZATI SEF S APLIKACIJOM

- Spojite telefon na WiFi
- Preuzmite aplikaciju "Smart Life" , kliknite "Add Device" i odaberite "Camera&Lock" na početnoj stranici, zatim "Safe Box (Wi-Fi)" (Slika 1), unesite naziv i lozinku WiFi mreže na koju se želite povezati.
- Kada su vrata otvorena, probudite ploču i pritisnite tipke "0" "4" na sefu, zatim pritisnite gumb za resetiranje 1-2 sekunde.
- Pozadinsko svjetlo tipke svijetli i treperi, što znači da sef započinje povezivanje s mrežom, kliknite "Confirm the indicator is blinking rapidly" u aplikaciji i također kliknite "EZ mode" (Slika 2).
- Nakon uspješnog povezivanja, u aplikaciji će se prikazati uređaj "safe" (Slika 3).
- Zvučni signal na sefu će dati dugi zvuk i prikazati "-DoNE-".
- Aplikacija prikazuje količinu električne energije i status otvaranja/zatvaranja sefa.



Slika 1



Slika 2



Slika 3

KAKO POSTAVITI KORISNIČKU ŠIFRU/OTISAK PRSTA U APLIKACIJI

- Na stranici "Users" u aplikaciji kliknite na Member i zatim "Add" za dodavanje šifre/otiska prsta (Slika 4).
- Probudite ekran sefa, pritisnite tipke "2" i "#" (Slika 5).
- Nakon što sef dvaput kratko zazvoni, na ekranu se prikazuje "---". Unesite šifru i pritisnite "#". (Ako dodajete otisak prsta, ekran prikazuje trenutni broj otisaka prsta, svjetlo za otisak prsta se pali i čekajte da prst bude pritisnut, kao kod lokalne registracije otiska prsta.) Nova šifra se prikazuje na sefu, a "-DoNE-" na ekranu, zvučni signal daje dugi zvuk, a u aplikaciji piše "Add successfully" (Slika 6).


❗ Napomena: Ova radnja se mora izvoditi dok je sef otvoren. Možete dodati 4 korisničke šifre u aplikaciji; kada dodate zadnju (četvrtu) šifru, dodavanje nove šifre zamjenjuje zadnju.



Slika 4



Slika 5

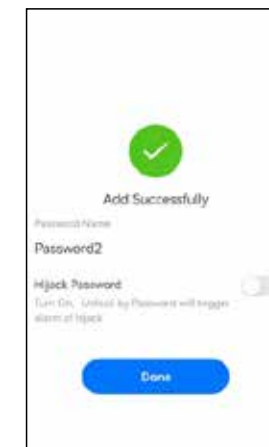

Slika 6

KAKO OBRISATI KORISNIČKU ŠIFRU/OTISAK PRSTA U APLIKACIJI

- Na stranici "Users" u aplikaciji kliknite na Member i zatim "-" za brisanje šifre/otiska prsta.
- Probudite ekran sefa, pritisnite tipke "3" i "#".
- Kliknite gumb za potvrdu u aplikaciji, na panelu će se prikazati "-DoNE-", a zvučni signal daje dugi zvuk.

TIHI NAČIN


- Uključite tihi način u odjeljku "Settings" aplikacije (Slika 7). Kada se pojavi skočni okvir, probudite tipku na sefu i pritisnite "1" + "#" tipke. Sef će prikazati "-DoNE-", a funkcija isključivanja zvuka će se aktivirati nakon sinkronizacije aplikacije.
- Isključite tihi način u postavkama aplikacije. Kada se pojavi skočni okvir, probudite tipku na sefu i pritisnite "1" + "#" tipke, sef prikazuje "-DoNE-". Nakon sinkronizacije aplikacije, zvučni signal ponovno zvuči.

POSLOVNI NAČIN


Tijekom poslovnog načina, nijedna šifra ni otisak prsta ne može otvoriti vrata.

Tijekom postavljanja poslovnog načina, vrata moraju biti zatvorena.

- Uključite poslovni način u postavkama aplikacije (Slika 8). Kada se pojavi skočni okvir, probudite tipku na sefu i pritisnite "4" + "#" tipke. Sef prikazuje "-DoNE-" i poslovni način se aktivira nakon sinkronizacije aplikacije.
- Isključite poslovni način u postavkama aplikacije i dodirnite bilo koju tipku na ploči. Ako zvučni signal dugo zvuči, poslovni način je isključen.

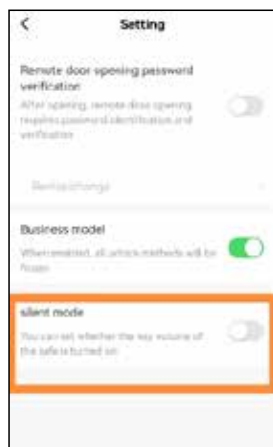

Slika 7

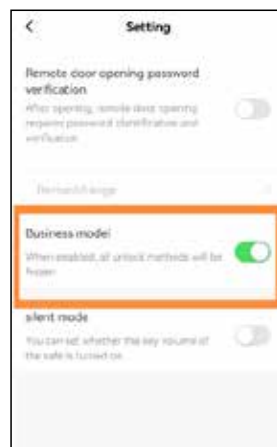


Slika 8


KAKO POSTAVITI PRIVREMENU WIFI ŠIFRU

Može se postaviti samo jedna privremena šifra u aplikaciji, prije postavljanja nove obrišite prethodnu.

- Otvorite aplikaciju i kliknite "Privremena šifra", zatim "Dodaj" (ne smije biti ista kao postojeća šifra), unesite bilo koju 7-znamenkastu šifru ili kliknite "Generiraj nasumično" (ako koristite nasumičnu šifru, zabilježite je da ne zaboravite), odaberite "vrijeme početka" i "vrijeme završetka", na kraju kliknite "Spremi" (Slika 9).
- Nakon što probudite ekran sefa, pritisnite "5" i "#" na sefu. Na ekranu se prikazuje "-DoNE-". Nakon osvježavanja aplikacije prikazuje se "važeće" (Slika 10).

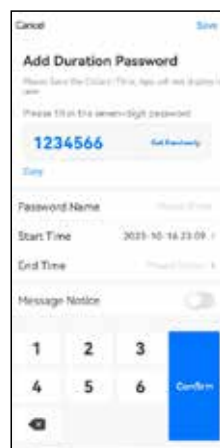

Slika 9

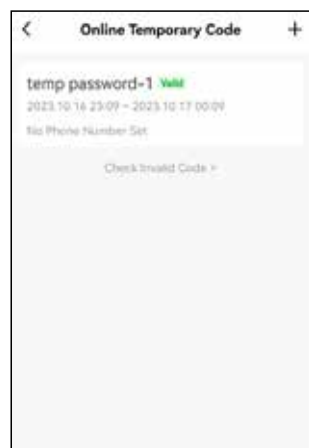

Slika 10

KORIŠTENJE PRIVREMENE WIFI ŠIFRE ZA OTVARANJE VRATA

- Probudite ekran sefa i unesite 7-znamenkastu privremenu šifru, pritisnite "#" za potvrdu.
- Ako je šifra ispravna: na ekranu piše "OPENED", zvučni signal daje dugi zvuk, a unutarnje svjetlo svijetli 30 sekundi nakon otvaranja vrata.
- Ako je šifra pogrešna: tri kratka zvuka i na ekranu piše "-Error".

KAKO OBRISATI PRIVREMENU WIFI ŠIFRU

- U aplikaciji na stranici privremenih šifri kliknite na šifru koju želite obrisati. Odaberite "Delete" u skočnom izborniku. Nakon odabira, prikazuje se "Deleting".
- Zatim probudite ekran sefa, pritisnite "5" i "#" na sefu. Na ekranu se prikazuje "-DoNE-". Ova privremena šifra će biti obrisana nakon osvježavanja stranice.

DALJINSKO OTVARANJE VRATA


- Nakon buđenja ekrana sefa, pritisnite "6" i "#" na sefu.
- U aplikaciji se prikazuje "Remote unlocking", možete odabrati "Agree" ili "Reject" (Slika 11) (ako ste postavili daljinsku šifru u postavkama, prvo je unesite).
- Odaberite "Agree": sef se otvara. Odaberite "Reject": sef prikazuje "Error".

POSTAVKE POVEZIVANJA ČLANOVA

- Nakon postavljanja korisničke šifre ili otiska prsta, otvorite aplikaciju i uđite u "Member Management", gdje će biti opcija "There are Unlock IDs with no members associated, please assign" (Slika 12). Korisnici mogu povezati svoje korisničko ime s načinom otvaranja vrata (šifra ili otisak prsta), što olakšava praćenje tko je otvorio vrata prilikom pregleda zapisnika.




Slika 11

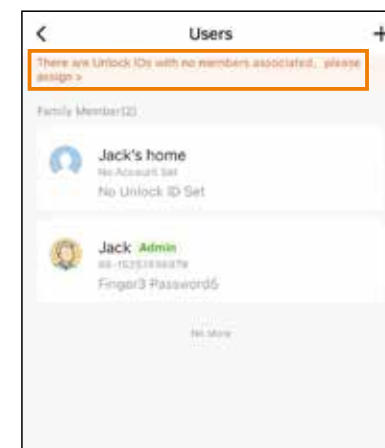


Slika 12

HOW TO ADD MEMBERS ON APP

- Click on "Me", click on "Home Management"(Pic13).
- Select a home that has already been added with a device. If no home has been created, create a home first.
- Click on "Add Member"(Pic14).
- Choose the method of invitation, such as WeChat,Whatsapp,ins.
- The invitee opens the "Smart Life" app, selects "Home Management", then clicks "Join a home" (Pic15), and enters the invitation code (Pic16)sent by the inviter.

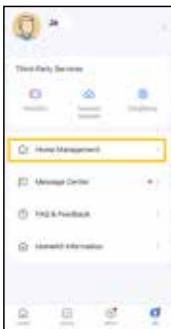

Pic 13

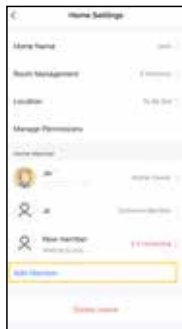

Pic 14



Pic 15



Pic 16



Pic 17

TIMEOUT UNCLOSURE REMINDER

- After the door is opened and not closed for more than one minute, the safe will send a message to the APP via WiFi, and the APP will pop up a notification(Pic17).

WIFI INFORMATION INQUIRY

- Open the app,click on "Record Log", you can check the unlock record.
- Click on "Alarm message", you can check the wrong password alarm and unclosed timeouts alarm.




A SAFE THAT CAN BE OPENED VIA AN APP FROM A REMOTE LOCATION OR WITH A FINGERPRINT


SW-24W F24 WIFI

! Please do not keep emergency keys in your safe!

Schematic drawing of case

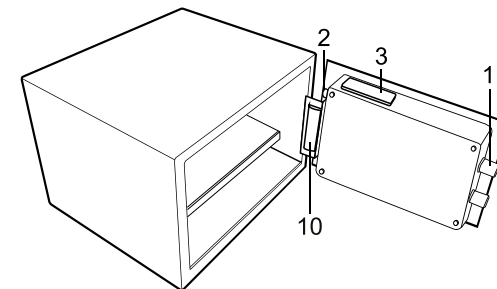

Schematic drawing of control panel

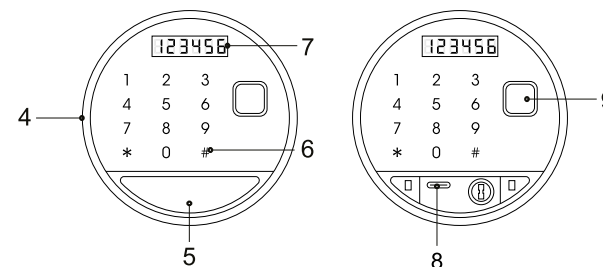

- 1.Bolts
- 2.Reset Button
- 3.Battery Compartment
- 4.Panel
- 5.Emergency Lock Cover

- 6.Confirm Button
- 7.LED Display Screen
- 8.Power Supply Port
- 9.Fingerprint Screen
- 10.LED Light


FUNCTION

- Set code: Short press the reset button(Press for about 1s, not more than 2s).
- Restore factory settings: Long press the reset button(press for more than 2s).
- Clear: When entering a new password, press the "*" key each time to clear the last digit entered.
- It has five user codes in total, the factory preset user code is "1234", this group of user code can only be modified by the reset button, and the other 4 user codes can be added and modified through the APP.
- It has one master code, the factory preset master code is "19980818", can only be modified through reset button.
- Once safe enter the sleep state, all previous operations will be terminated, press any key to wake up, and the backlight of the key will be lit.

OPEN THE SAFE FOR THE FIRST TIME

- Press either one ends of the cover to remove the emergency cover, you will see emergency lock.
- Insert the emergency key, and turn the emergency key clockwise on the panel, then you can open the door.

⚠ **CAUTION:** For your total security, please take care of the emergency key and keep them in one secret place out of the safe.

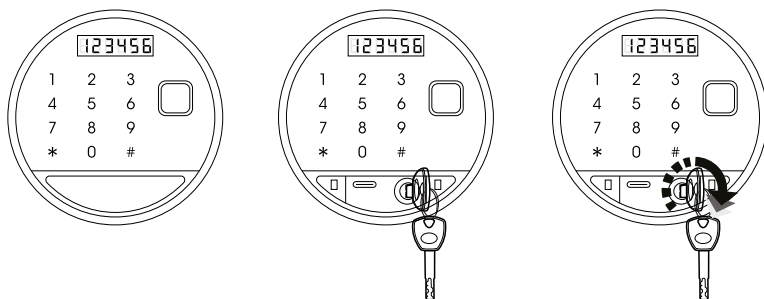

POWER SUPPLY

- Open the door.
- Take out the battery compartment .
- Install 4 fresh batteries by lining them up in a manner as indicates by the "+" and "-" signs.

CHANGE USER CODE

- When the door is open, short press the setting button. "-----" is displayed on the LCD, the backlight of the key lights up, and the buzzer buzzes twice. In this case, you can enter a new password of 3 to 8 digits, and press the "#" key to confirm. The newly entered password is displayed on the display. If you press "*" before entering the password, the entered password will not be displayed, and "-DoNE-" is displayed on the screen. The long buzzer indicates that the password is successfully changed.
- If you do not press a button within 8 seconds, it will exit the change mode (the password is still the old password) and return to the standby mode.

CHANGE MASTER CODE

- When the door is open, press any key to wake up, and then press "0" twice, short press the setting button. Enter a new password of 3 to 8 digits and press the "#" key to confirm the password. If "-DoNE-" is displayed on the screen, the buzzer makes a long sound indicating that the password is successfully changed.
- If you do not press a button within 8 seconds, it will exit the change mode (the password is still the old password) and return to the standby mode.

FINGERPRINT REGISTRATION

- When the door is open, press any key to wake up, and then press "0" and "1", the number "01" will be displayed on the screen, press the setting button inside the door, the buzzer will beep twice.
- Put your finger at the finger collector where blue light is on, it will beep once every time the finger is placed, and the finger needs to be placed for 5 consecutive times.
- After the registration is successful, the green light of the fingerprint module will beep. If "-DoNE-" is displayed on the screen, the fingerprint is successfully registered with a buzzer. If the registration fails, the fingerprint module turns on red, buzzes three times, and displays "-error".

⚠ **CAUTION:** Maximum 50 fingerprints can be registered.

OPEN THE DOOR

Use code to open

- Press any key to wake up, then enter the user code or master code and press the "#" key to confirm, the buzzer will make a long sound, the door opens, and the screen will display "OPENED". The light goes on for 30 seconds after the door is opened.

Use fingerprint to open

- In the closed state, put the registered finger on the fingerprint module, the buzzer will sound, the door opens, and the screen will display "OPENED". The light goes on for 30 seconds after the door is open.
- If the password or fingerprint is incorrect, the safe will beep for three times. The screen displays "-Error".
- If you enter an incorrect password or fingerprint for five consecutive times, the safe will be locked for 20 seconds and beep for 20 seconds. If you enter an incorrect password or fingerprint for three consecutive times more, the safe will be locked for 5 minutes and beep for 5 minutes.

CLOSE THE DOOR

- Push the door a little hard to lock automatically, or when the screen wakes up, press "#" to lock. If the door is not closed, the buzzer will sound three short times.

SYSTEM INITIALIZATION / DELETION

- When the door is open, press the reset button and hold for about 5 seconds until the backlight is lit. It means the memory of all recorded codes and fingerprints has been cleared.
- After the reset, the password returns to its original state and all the fingerprint is cleared.

LOW-BATTERY WARNING

- When you open the door, the screen displays "OPENED" and then it displays "L-BAT", indicating that the battery is low-voltage, please replace the battery in time.

WIFI PART OPERATION INSTRUCTIONS

Tips:

- All WIFI operations should be performed when the network is normal, and it is not support for 5G networks.
- It is the best condition to connect to the network when the battery voltage is higher than 4.8V, otherwise network connection may fail.

HOW TO CONNECT TO SAFE IN APP FOR THE FIRST TIME

- Connect your phone to WiFi .
- Download app"Smart Life" ,click "Add Device" and select "Camera&Lock" on the home page, then select "Safe Box (Wi-Fi)"(Pic1), enter the name and password of the WIFI to be connected to the safe.
- When the door is open, wake up the panel and press the key "0" "4" in safe, and then press the reset button for 1-2 seconds.
- The backlight of the key lights up and flashes,it means the safe start to connect the network, click "Confirm the indicator is blinking rapidly" on app and also click "EZ Mode"(Pic2).
- After the network is configured successfully, a "safe" device will be displayed on the APP(Pic3). The buzzer on the safe box will make a long sound and display "-DoNE -".
- The app shows the quantity of electricity and the opening and closing status of the safe.



Pic 1



Pic 2



Pic 3

HOW TO SET USER CODE/FINGERPRINT IN APP

- On the "Users" page of the APP , click the Member and click "Add" to add the password /fingerprint(Pic4).
- Wake up the screen of safe, press the key "2" and "#"(Pic5).
- After the safe have two short beeps, "-----" is displayed on the safe. Enter the password and press "#". (If adding fingerprints, the screen will display the current number of fingerprints, the fingerprint light will be on, and wait for the finger to be pressed, just like registering fingerprints locally.)The newly set password is displayed on the safe, and "-DoNE -" is displayed, the buzzer plays a long sound, and the "Add successfully" is displayed on the APP(Pic6).


❗ **REMARK:** This operation must be taken during safes is open status, you can add 4 user code in app,when added to the last password (i.e. after the fourth password), adding a user password will overwrite the last user password.



Pic 4



Pic 5

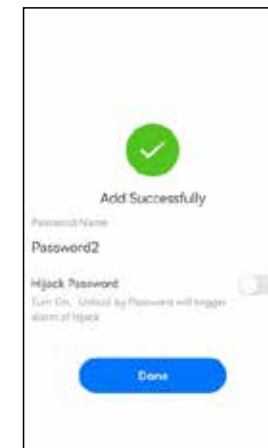

Pic 6

HOW TO DELETE USER CODE/FINGERPRINT IN APP

- On the "Users" page of the APP , click the Member and click "-" to delete the password /fingerprint.
- Wake up the screen of safe, press the key "3" and "#".
- Click the confirm button on app, and "-DoNE -" will be displayed on the panel, the buzzer plays a long sound.


SILENT MODE

- Turn on the silent mode in the "Settings" section of the app(Pic7). When there is a pop-up box, wake up the button on the safe end and press the "1"+"#" buttons. The safe will display "- DoNE -", and the mute function will be activated after the app synchronizes.
- Turn off the mute mode in the settings on the APP. When there is a pop-up box, wake up the button on the safe end, press the "1"+"#" button, and the safe will display "- DoNE -". After the APP synchronizes, the buzzer will sound again.


BUSINESS MODE

During business mode all passwords and fingerprints can not open the door. During setting the business mode, please keep the door close.

- Turn on the business model in the settings section of the APP(Pic8). When a pop-up appears, wake up the button on the safe side and press the "4"+"#" button on the safe. The safe will display "- DoNE -" and the business trip mode will be activated after the APP synchronizes.
- Turn off the business mode in the "Setting" on the APP and touch any key on panel. If the buzzer sounds for a long time, the business trip mode is disabled.

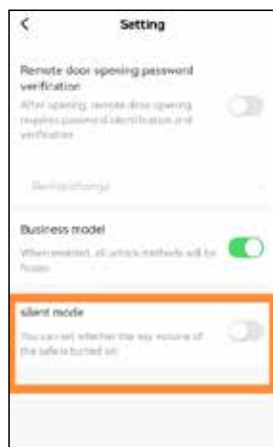

Pic 7

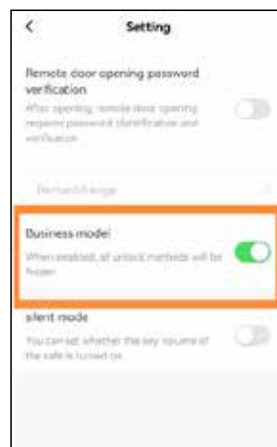


Pic 8


HOW TO SET THE WIFI TEMPORARY CODE

Only one temporary password can be set on the app, please delete the last temporary password before setting.

- Open the APP and click "Temporary Code", click "Add"(Cannot be duplicated with password) , enter any 7 digits password on the app or click "Get Randomly" (if random code is used, it is best to record the generated password to prevent forgetting), then select "start time" and "end time", and finally click "Save"(Pic9).
- After the wake up the screen of safe, press "5" and "#" on the safe., "-DoNE -" will be displayed on the safe.After refreshing the app, it shows "valid"(Pic10).

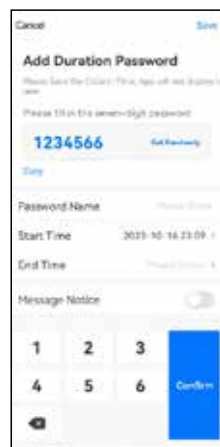

Pic 9

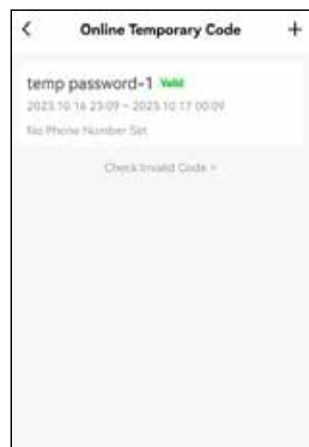

Pic 10

USE WIFI TEMPORARY PASSWORD TO OPEN THE DOOR

- Wake up the screen of safe and enter a 7-digit temporary password, and press "#" to confirm.
- If the password is correct: the screen displays "OPENED", the buzzer beeps for a long time, and the inner lighting is on for 30 seconds after opening the door.
- If the password is wrong: beep for three short bursts, and "-Error" is displayed on the screen.

HOW TO DELETE WIFI TEMPORARY PASSWORD

- Go to the temporary code page of the APP and click the password you want to delete. Select "Delete" in the pop-up option box. After you select this temporary password, "Deleting" will be displayed.
- Then wake up the screen of safe, press the key "5" and "#" on the safe. "-DoNE -" is displayed on the safe. This temporary password will be deleted after refreshing the page.

REMOTE DOOR OPENING


- After wake up the screen of safe, press "6" and "#" on the safe.
- "Remote unlocking" will display in app, you can choose "Agree" or "Reject"(Pic11) (follow the prompts, if you set a remote password in "setting", you need to enter the password first). Select "Agree": The safe opens. Select "Reject": The safe display "Error".

MEMBER ASSOCIATION SETTINGS

- After setting the user code or fingerprint. Open the app and enter "Member Management", where there will be an option to "There are Unlock IDs with no members associated, please assign"(Pic12). Users can associate their username with the door opening method (password or fingerprint), making it easier to know which user opened the door when checking logs in the future.



Pic 11

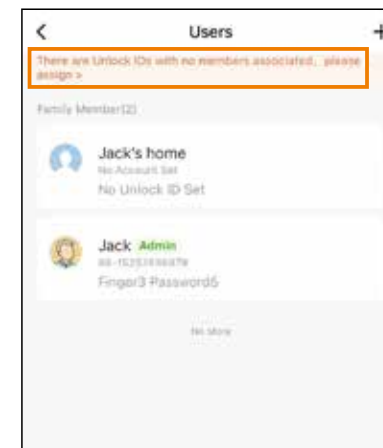

Pic 12