

VATROOTPORNI I VODOOTPORNI KOVČEG

FP4101/4102

FP4101K/ FP4102K

Molimo vas da ne držite sigurnosne ključeve u sefu!

UPOZORENJE


Ovaj sef nije namijenjen niti certificiran za pohranu vatrenog oružja ili drugih oružja.

Ne pohranjujte vatreno oružje ili drugo oružje.


Ne pohranjujte lijekove.

Pročitajte i slijedite sve upute u priručniku za pravilni odabir i pohranu predmeta.

OTVARANJE SEFA

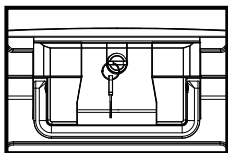


Okrenite ključ

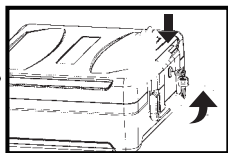


Nježno pritisnite poklopac
rukom i povucite zasun
prema gore

ZATVARANJE SEFA

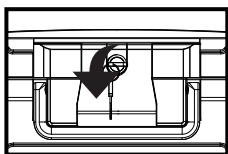

Povucite zasun
prema dolje

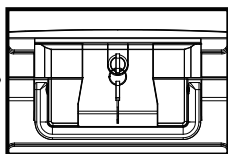

Okrenite ključ

FIREPROOF AND WATERPROOF SUITCASE

FP4101/4102

FP4101K/ FP4102K

Please do not keep safe keys in your safe!

WARNING


This safe is not intended or certified to secure firearms or other weapons.

Do not store firearms or other weapons.


Do not store medications.

Read and follows all instructions in Product Manual for proper selection and storage of items.

OPENING CHEST

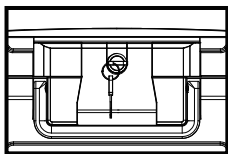


Turn key

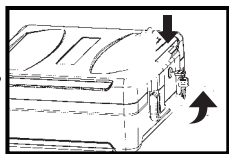


Gently press down
the lid with your hand
and pull up on the latch

CLOSING CHEST

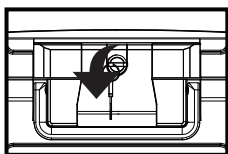

Pull down on latch

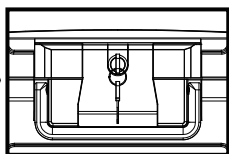

Turn key